



Mixels

41568




LEGO.com

6157128


1



2

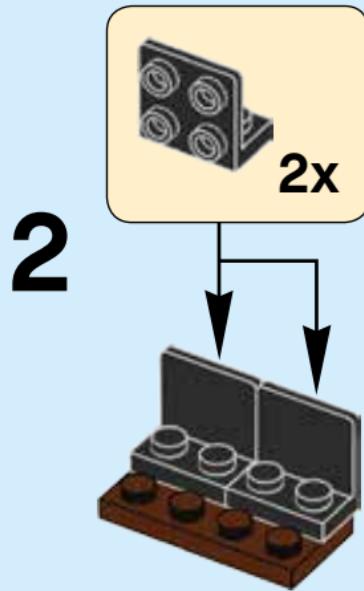


3

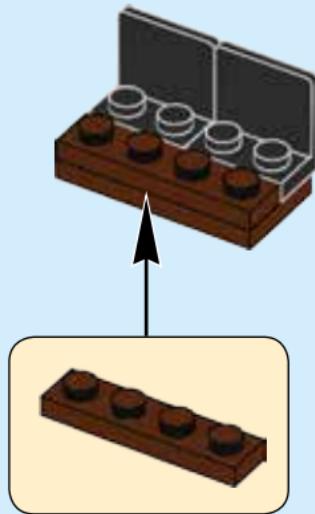


4




5

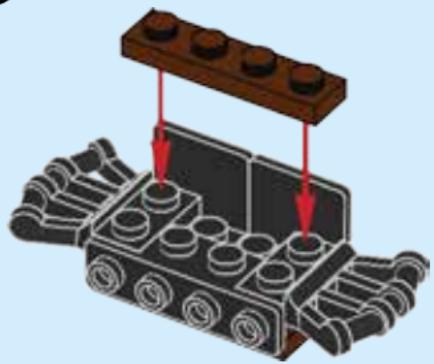


6

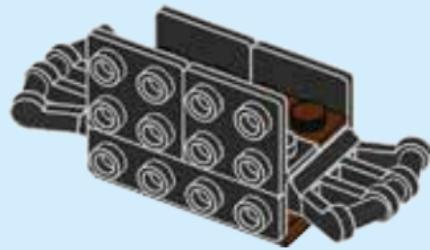


7

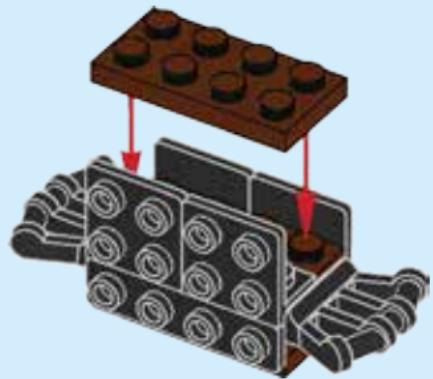

8

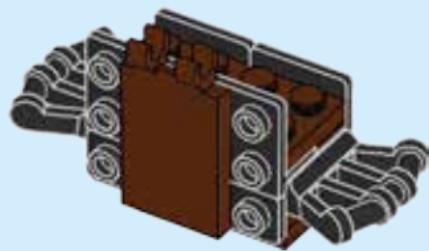

9

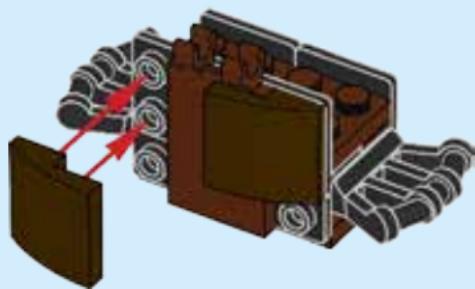


10




11




12

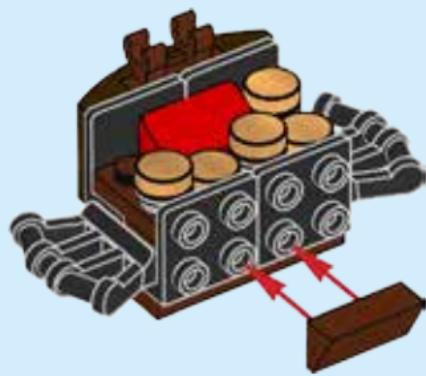


13

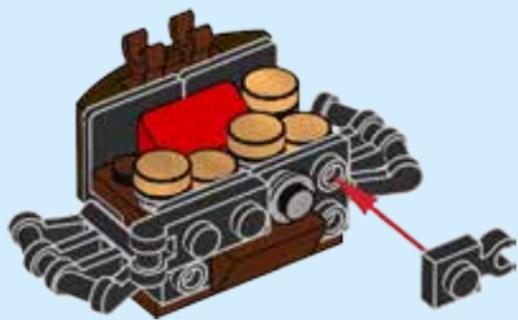


14

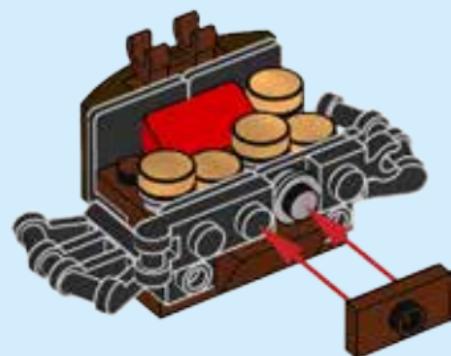

15

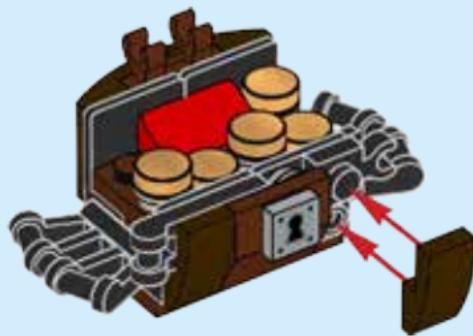

16

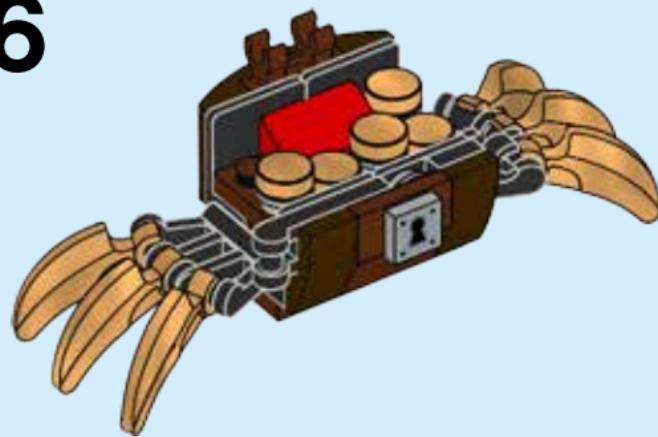



17




18





19




20

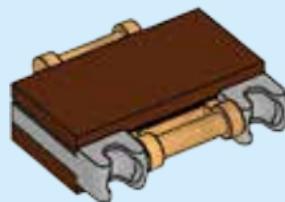


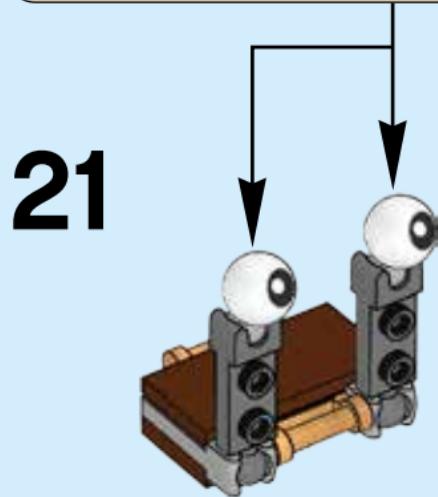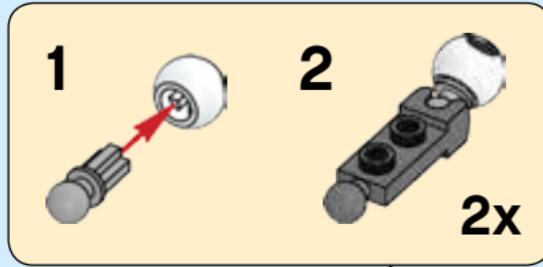


22

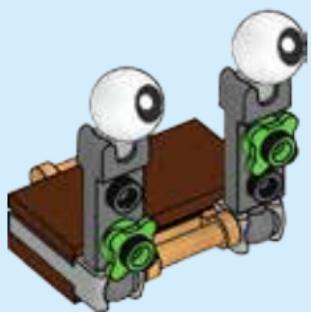



23

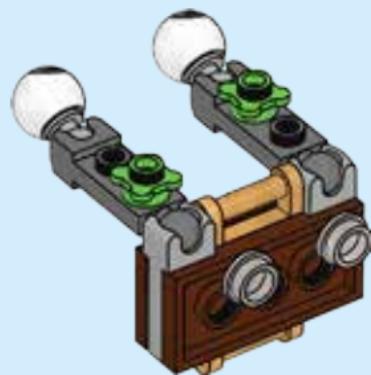

24

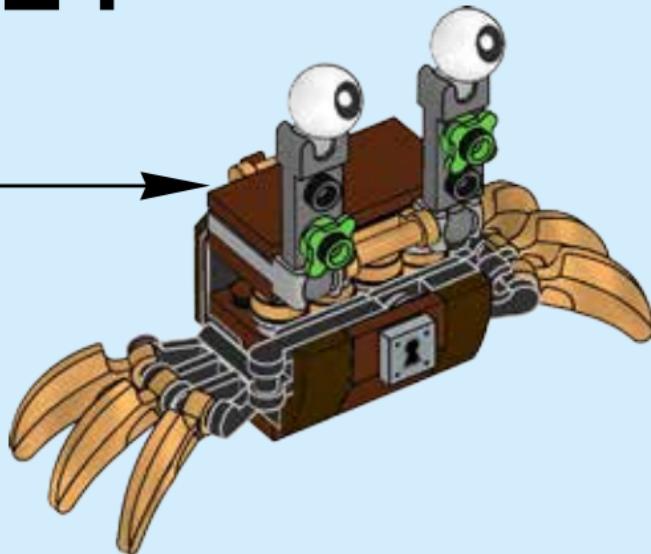

25

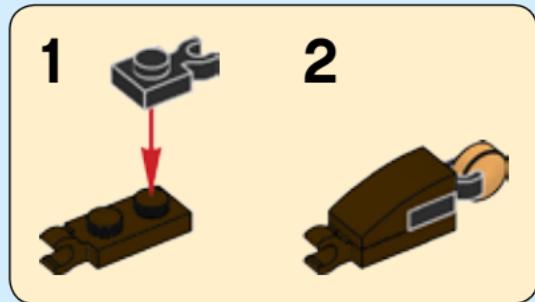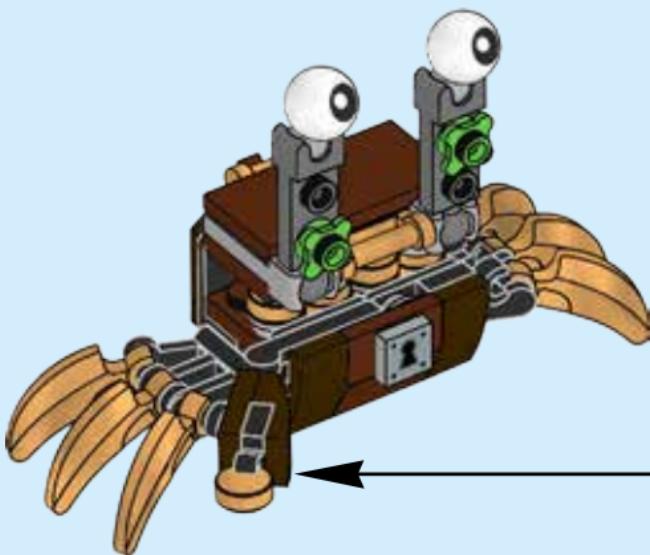




26




27




28

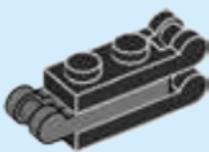

29

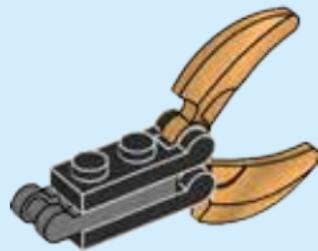

30

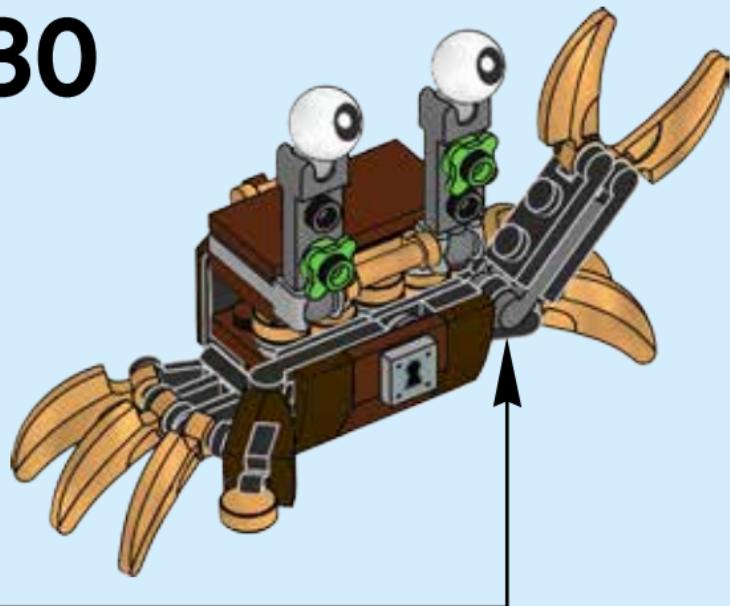



6x
4649422



3x
6046943



2x
6056225



2x
4550017



2x
4619599



1x
6035291



2x
4585493



1x
6141589



1x
4651524



4x
6000650



1x
6063898



1x
6092590



8x
6141591



2x
6047037



6x
4633691



3x
4515368



2x
4211375



2x
4211190



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :

1-800-422-5346 :



1x
6089577



1x
4521187



1x
4579690



2x
4604304



2x
6039482



3x
4211186



SHARX
41566




SKULZY
41567



LEWT
41568

**PYRRATZ
MAX!**

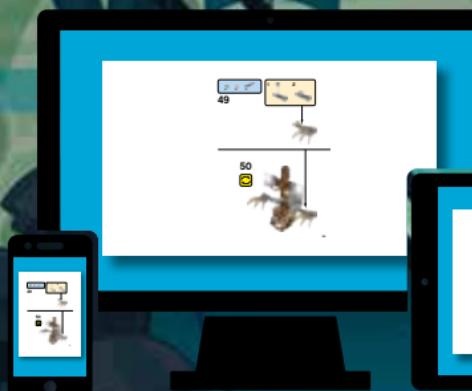



Mixels

SERIES

8

SKULZY
41567

AQUAD
41564

SPLASHO
41563

SKRUBZ
41570

SURGEO
41569

SHARX
41566

LEWT
41568

TUTH
41571

HYDRO
41565





club

